


WHITE PAPER SERIES

Get your motor running

Part 1: An introduction to reduced voltage starting of three phase induction motors

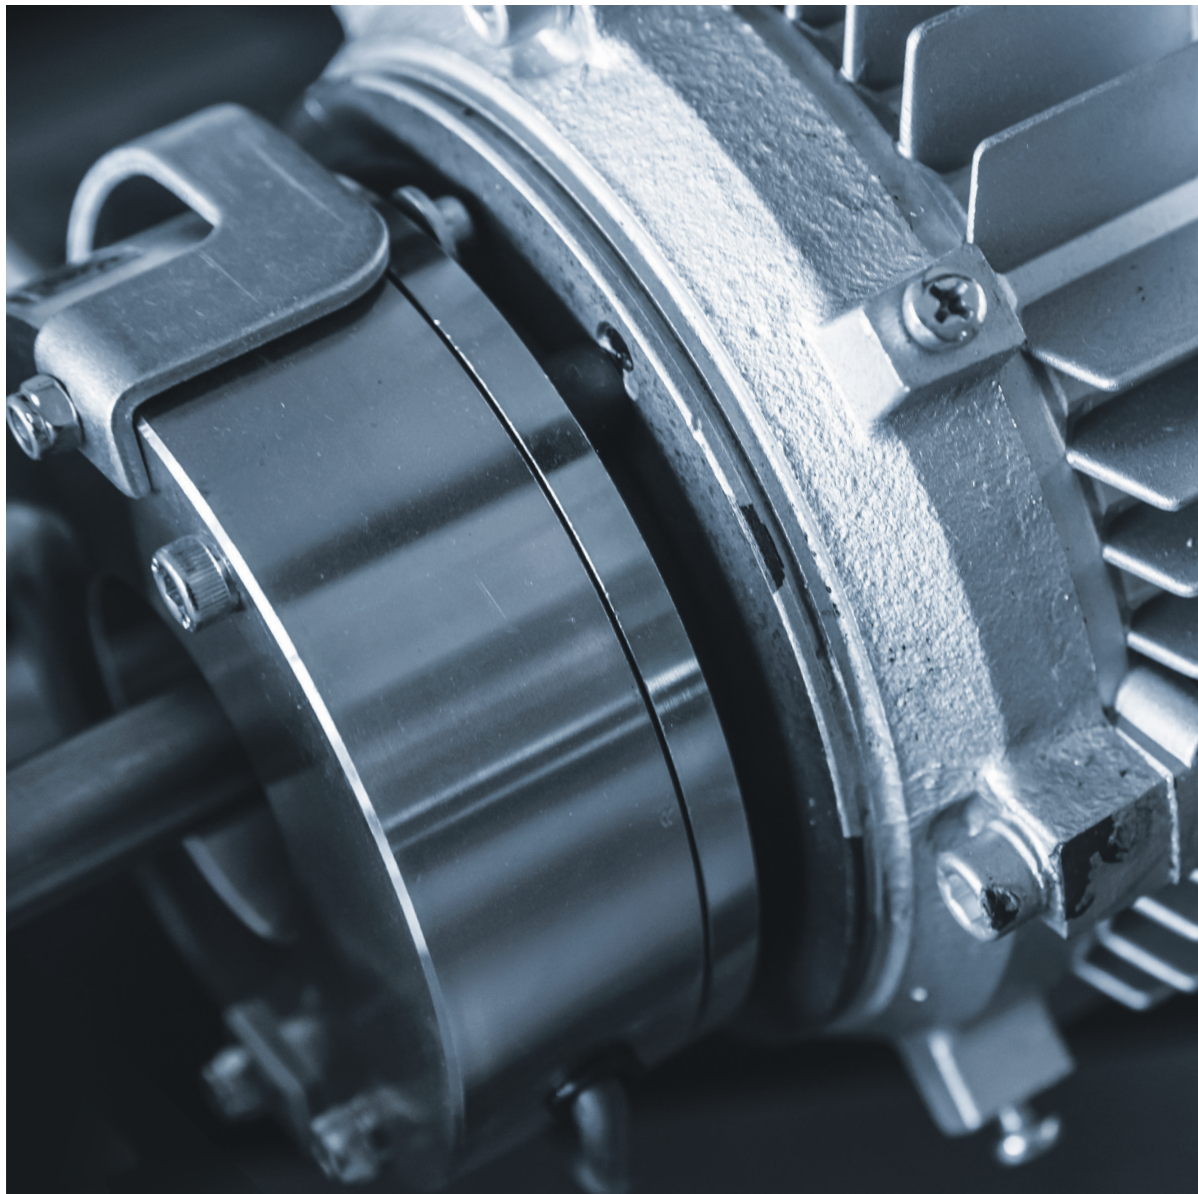

RIGHT FROM
THE START

AUCom
MOTOR CONTROL SPECIALISTS



The starting function of motors is often misunderstood, impacting motor performance and compromising energy efficiency.

We're delivering a series of technical white papers to provide an introduction to the theory of starting motors, based on the work of electronics design expert Mark Empson, one of AuCom's founders in 1978.

There's more information on our website, or you can follow us on Twitter @softstarters. You can also talk to your local distributor of AuCom products. A directory is available at www.aucom.com.

Thanks for reading.

James Archer

Business Development

Contact me via j.archer@aucom.com

New Zealand

123 Wrights Road, PO Box 80208,
Christchurch 8440, New Zealand
T +64 3 338 8280 F +64 3 338 8104

China

203-1 JH Plaza, 2008 Huqingping Road,
Shanghai 201702, China
T +86 21 5877 5178 F +86 21 5877 6378

Germany

Borsigstraße 6, 48324 Sendenhorst, Germany
T +49 2526 93880 140 F +49 2526 93880 100

Middle East

10th Floor, Swiss Tower, Jumeirah Lakes Towers,
Dubai, UAE
T +971 4279 8349 F +971 4279 8399

North America

2528 Lovi Road, Building 2-2A,
Freedom, PA 15042, USA
T 855 928 2666 (855 9 AUCOM NA), +1 724 987 4952
F +1 724 510 3005
<https://my.aucom.com>

For more information and your local contact visit www.aucom.com

**RIGHT FROM
THE START**

Reduced voltage starting of three phase induction motors

Reduced starting current is often required by electrical supply authorities to reduce current surges and the resulting voltage fluctuations on the supply system. Reduced voltage starting of three phase AC induction motors can be used to reduce the starting current drawn by the motor.

Full voltage starting (direct-on-line or DOL) creates a starting current surge equal to the locked rotor current (LRC) of the motor. The LRC typically ranges from 500% to 800% of the motor full load current (FLC). The LRC depends on the design of the motor; a value of 600% FLC is common.

The full voltage starting torque is equal to the locked rotor torque (LRT) of the motor.

Reduced voltage starting reduces the available starting torque of the motor. It cannot be used for some applications because of the load's starting torque requirements

INDUCTION MOTORS

The induction motor performs two main functions in industry:

- To convert electrical energy into mechanical energy, to accelerate the motor and load to the operating speed. This is the starting function.
- To convert electrical energy into productive work output from the machine. This is the operating or work function.

The starting characteristics and the full load characteristics are both very important in the selection and specification of motors.

The starting function of the motor is poorly understood; many motors are misapplied and so exhibit very poor starting characteristics.

Full load characteristics of the operating functions are easy to specify with motor speed, torque and efficiency being the major selection criteria.

MOTOR DESIGNS

Motors consist of two major sections: the stator and the rotor.

The stator consists of magnetic poles and stator windings within the frame of the motor. The full load characteristics are determined by varying the winding configuration and the contour of the stator laminations. The motor speed is determined by the number of poles.

The rotor consists of a cylindrical short circuited winding around iron laminations. The rotor winding is often referred to as a squirrel cage.

The cage is constructed of a number of bars running parallel to the motor shaft, near the surface of the rotor. These rotor bars are short circuited by shorting rings at each end of the rotor. The shape, material and position of the bars within the rotor determine the starting characteristics of the motor.

In operation, the motor performs as a transformer with current induced in the rotor by the flux from the stator. When the rotor is stationary (locked rotor conditions), the motor current is limited by the effective series impedance of the rotor and stator.

At very low speeds, the dominant impedance is the rotor. At high speeds, the stator impedance can become influential. Thus the rotor determines the starting characteristics of the motor and the stator influences the full speed characteristics.

The torque developed by the motor is a function of the rotor current, the effective rotor resistance and the rotor slip (difference between rotor speed and synchronous rotor speed). During starting, the current is limited by both the rotor resistance and the rotor leakage reactance. Motors which exhibit a high LRC tend to have a low LRT, while motors with a low LRC generally have a high LRT.

A high starting torque is generated by using a high resistance rotor, but this can result in increased slip at full load. One compromise is to use a rotor consisting of two cages: a high resistance outer cage giving a high starting torque and a high reactance inner cage giving a low slip operation.

This double cage motor can sometimes be more limited in starting capacity than single cage motors and so is not always suitable for multiple start applications. Typical full voltage starting torques (LRT) are in the range of 120% to 220% of full load torque (FLT). It is often possible to increase the LRT by over 50% by utilising a different rotor design.

The designs of AC induction motors fall into four main categories, each exhibiting different starting and operating characteristics. The motor design should be selected by the machine manufacturer to suit the mechanical load of the machine.

- Design A motors have a shallow rotor bar design resulting in low rotor inductance and usually low rotor resistance. Design A motors exhibit a high LRC and a low LRT. They have a good operating efficiency and a high pull out torque. The full load slip of these motors is low.

Typical LRC = 650% to 1000% FLC
Typical LRT = 100% to 140% FLT
- Design B motors have a higher rotor inductance and rotor resistance than Design A motors. Design B motors have a lower LRC and higher LRT than Design A motors. The efficiency is similar to Design A, but pull out torque can be lower and slip higher.

Typical LRC = 550% to 650% FLC
Typical LRT = 140% to 240% FLT
- Design C motors are often known as double cage motors because of two windings on the rotor. One winding is low resistance as found in Design B motors and the outer winding has a high resistance. The low resistance inner winding is designed to have a high reactance. Double cage motors have a low LRC and high LRT, typically greater than 200%.
- Design D motors have a high reactance squirrel cage winding. They exhibit a high LRT (up to 300%) and a low LRC. The high resistance rotor results in a high full load slip and low efficiency.

Increasing the motor size or rating will not always increase the starting torque. When it is difficult to start a machine, the motor is often incorrectly replaced with a higher rated motor. In fact an equivalent rated motor of a different design is often more effective and costs less.

Example 1

A 75 kW motor with 180% LRT has a higher start torque than a 100 kW motor with 120% LRT. The starting current for the 75 kW motor is generally less than the 100 kW motor.

Incorrect motor selection may use an oversized motor to achieve the required starting torque, with associated increased motor and starter cost, and a higher starting current.

With reduced voltage starting, the torque is reduced by the square of the current or voltage reduction. High current motors tend to have low starting torque, so any reduction in the start voltage results in a greater difference in starting torque between the high and low starting torque motors.

In many applications the starting current is required to be less than 300% FLC. Reduction from 600% FLC to 300% FLC is a 2:1 reduction, resulting in a torque reduction of 4:1. Reduction from 900% FLC to 300% FLC is a 3:1 reduction in current, resulting in a 9:1 reduction in starting torque.

Example 2

Motor A has LRT 180% and LRC 600%, so at 300% FLC the motor produces 45% starting torque. Motor B has LRT 120% and LRC 900%, so at 300% FLC produces 13% starting torque. This is a torque differential of over 3 times for two motors which appear to be very similar and would be sold in direct competition.

The higher torque motor may be a little more expensive, but this is insignificant compared to the torque available. The increase in torque means some machines can be successfully started at 300% FLC with Motor A but not with Motor B. To develop 45% FLT, Motor B requires 520% FLC. This would result in much more expensive starting equipment and in many cases the start current would be unacceptable.

Motor A: LRT = 180%, LRC = 600%

At 300% FLC the torque is:

$$180 \times \frac{300}{600} \times \frac{300}{600} = 45\%$$

Motor B: LRT = 120%, LRC = 900%

At 300% FLC the torque is:

$$120 \times \frac{300}{900} \times \frac{300}{900} = 13\%$$

In many situations it is best to use a high starting torque motor which has a low LRC. This may result in a higher motor cost, but the cost of the motor and starter combination will often be reduced.

Example 3

Table 1 shows that for motors of similar rating, the realisable torque can cover a wide range under reduced voltage (or reduced current) starting conditions.

For the nine motors surveyed, the initial start torque at 300% FLC ranges from 66% to 24%, a span of greater than 2:1 at the same current. The motors have very different starting efficiencies, despite the very similar full load characteristics.

$$\text{The initial start torque: } T_{ST} = \text{LRT} \times \frac{(I_{ST})}{(\text{LRC})} \times \frac{(I_{ST})}{(\text{LRC})}$$

Motor	Speed RPM	FLC A	LRC % FLC	LRT % FLT	FL eff %	Torque % FLT	
						@ 300% FLC	@ 400% FLC
1	1470	191	600	260	93	65	116
2	1475	184	600	190	94	48	84
3	1475	191	570	150	92	42	74
4	1480	187	660	190	95	39	70
5	1470	185	550	120	92	36	64
6	1470	191	670	150	93	30	54
7	1480	190	780	200	94	30	53
8	1475	182	850	220	94	27	49
9	1480	190	670	120	94	24	43

Table 1: A selection of 110 kW four pole motors and their characteristics

Example 4

Table 2 shows that with an initial start torque of 50% FLT, a standard duty starter can be used with Motor 1, but with Motor 9, a more expensive heavy duty starter is needed. The lower starting efficiency motors also suffer a high level of heating during start and so the number of starts per hour must be lower.

The start current for an initial start torque can be calculated as follows:

$$I_{ST} = LRC \times \sqrt{\left(\frac{T_{ST}}{LRT}\right)}$$


Motor	10% FLT	20% FLT	50% FLT	100% FLT
1	120% FLC	170% FLC	260% FLC	370% FLC
2	140% FLC	190% FLC	310% FLC	440% FLC
3	150% FLC	210% FLC	330% FLC	470% FLC
4	150% FLC	220% FLC	340% FLC	480% FLC
5	160% FLC	230% FLC	360% FLC	500% FLC
6	170% FLC	250% FLC	390% FLC	550% FLC
7	180% FLC	250% FLC	390% FLC	550% FLC
8	180% FLC	260% FLC	410% FLC	570% FLC
9	200% FLC	280% FLC	430% FLC	610% FLC

Table 2: Start currents for a specified initial start torque

SPEED/TORQUE CURVES

The speed/torque curves are unique to each motor design type. When engineering a motor and starter for an application, the speed/torque curve for the motor and starter should be plotted against the machine speed/torque curve. Some motor manufacturers show the curve as a single line, while others illustrate the curve as a shaded band. The speed/torque characteristics are not smooth, but have many peaks and troughs. The manufacturers' curves are averages only.

To ensure the motor will start satisfactorily, there should be a good differential between the motor torque and the machine torque requirement at all speeds. If the start torque is marginal, the motor will noticeably change in acceleration as it increases in speed. The flat spots are usually very audible. Particularly severe torque flat spots occur for motors which have a rotor that is 'off round' causing an uneven air gap between the rotor and stator.

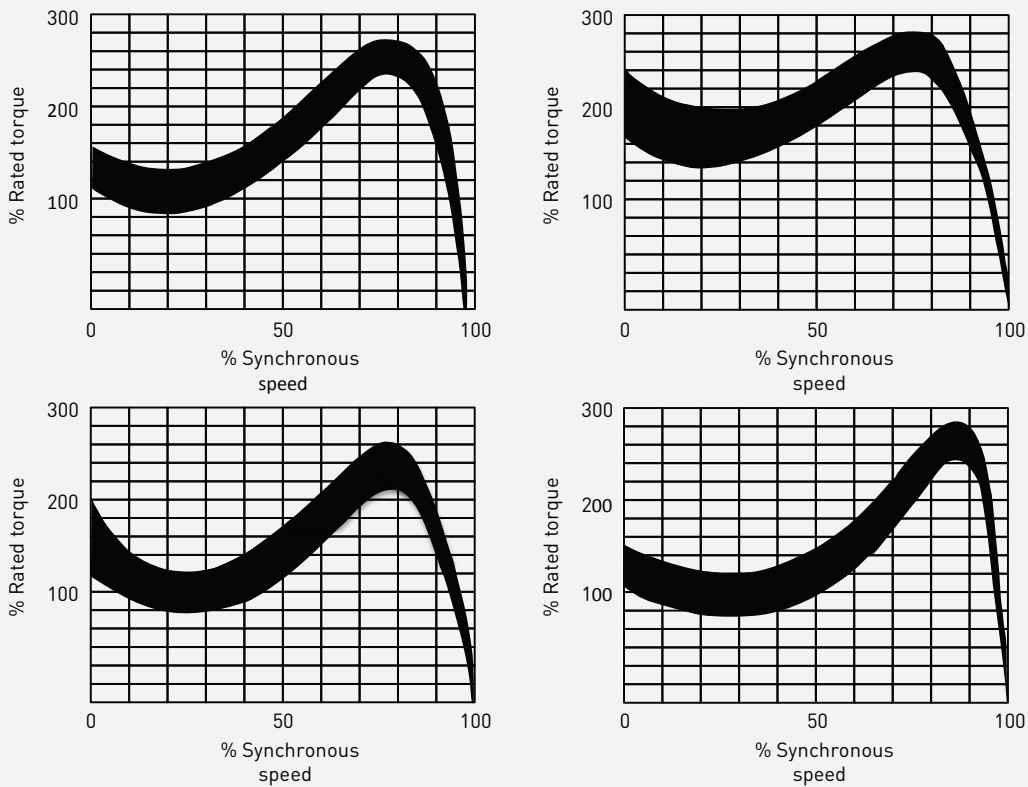

Examples of speed/torque curves.

Notes

Get your motor running white paper series

This paper is the first in a series of technical white papers published by AuCom as an introduction to the theory of starting motors.

Subsequent papers discuss the following topics:

- The differing start torque requirements of machines and motor loads
- Methods of motor starting
- An overview of solid state soft starters
- Variable frequency control

To access these and other published motor control resources please visit our website at www.aucom.com.

New Zealand

123 Wrights Road, PO Box 80208, Christchurch 8440, New Zealand
T +64 3 338 8280 F +64 3 338 8104

China

203-1 JH Plaza, 2008 Huqingping Road, Shanghai 201702, China
T +86 21 5877 5178 F +86 21 5877 6378


Germany

Borsigstraße 6, 48324 Sendenhorst, Germany
T +49 2526 93880 140 F +49 2526 93880 100

Middle East

10th Floor, Swiss Tower, Jumeirah Lakes Towers, Dubai, UAE
T +971 4279 8349 F +971 4279 8399

North America

2528 Lovi Road, Building 2-2A, Freedom, PA 15042, USA
T 855 928 2666 (855 9 AUCom NA), +1 724 987 4952 F +1 724 510 3005
 <https://my.aucom.com>

For more information and your local contact visit www.aucom.com

AuCom
MOTOR CONTROL SPECIALISTS

**RIGHT FROM
THE START**